

# **FS1.12 KD** INSTALLATION MANUAL

### **GENERAL INFORMATION**

#### **GENERAL NOTES**

This assembly manual addresses all metal ceilings manufactured by durlum. The different sections describe the corresponding products.

durlum is a leading German manufacturer of metal ceilings and cladding elements, mainly made of galvanised sheet steel, aluminium and expanded metal.



The relevant products are described in the marketing and sales documents. They are both acoustically effective, and can also be used as design elements only.

Specifically, these products are:

- Acoustic ceilings
- Chilled ceilings
- CHARACTER products

durlum differentiates between a wide range of ceiling systems, for example S1. "S" stands for the system, "1" for clamping. In this system, there are different nomenclatures that allow a further subdivision of the systems.

All durlum systems are systems of modular design. This applies not only to the substructure but also to the ceiling parts that are suspended, locked into place or placed on the substructure.

durlum metal ceilings comply with the standard EN 13964:2007 and are CE-certified.

For special systems marketed by us and for which no general approvals are available, there are suitable static certificates available, and suitable designs compliant with EN 13964 have been constructed.

#### **GUIDELINES**

These installation instructions have been structured in accordance with the requirement of EN 13964:2007. They describe a proper installation.

The description does not exempt the user from examining the structural conditions, implementing the building code regulations and observing the information given in the building permit prior to starting assembly. They have priority, but could not be included here.

It is advisable always to draw up assembly diagrams/drawings, to establish the location where assembly is to begin and to establish the required suspension points for the relevant ceiling system prior to starting assembly.

#### STRUCTURAL PRECONDITIONS

Metal ceilings may usually be installed as soon as the building is swept clean and at the latest after all wet work in the interior has been completed and the building has been closed.

Prior to starting assembly, the suspension points must be checked for their usability, and load introduction into the building must be guaranteed.

When using wall mounting points, such as brackets or wall anchors, the load-carrying capacity of the wall in question must be checked.

If ceiling elements rest on brackets, possible wall movements must be taken into account.

Only dowels for which a general building supervisory approval is available may be used, and their minimum extraction force must be greater than 100kg. The dowels must be mounted as specified by the relevant dowel manufacturer. We recommend performing regular tensile stress tests, to verify that dowels have been set correctly.

durlum metal ceilings are dimensioned such that they carry their own weight of the system construction plus a surface load amounting to 40N/m<sup>2</sup>. Higher loads must be taken into account or suspended separately in the construction, and the measures must be adapted to the situation at hand. Usually, built-in components and loads must be suspended separately.

For ceiling systems that do not allow any tolerance compensation within a module, suitable material expansions must be taken into account. Building expansion joints and tolerances customary in building construction must be taken into account accordingly.

durlum metal ceilings are, as a matter of principle, to be assembled by professional dry construction companies who are capable of assessing the overall conditions of the building, the metal ceiling and cladding, and can take the necessary precautions for correct, safe static mounting.

If parts from different manufacturers are used to assemble the ceiling, the relevant mounting company must provide the certificates required by EN 13964:2007 and must obtain suitable certificates of conformity itself.

Liability for proper selection of the products and system conformity can only be assumed for the systems delivered by durlum.

To prevent the parts from becoming dirty, gloves must be worn during assembly. If the ceiling products are delivered wrapped in a protective film, they must be protected from exposure to UV radiation [sunlight], the film must likewise have been removed from the goods no later than 4 weeks after delivery. The storage temperature must not exceed 30°C, since otherwise the adhesive on the panel may become hardened, and the protective film can no longer be removed.

#### STORAGE

durlum metal ceilings are usually delivered on pallets. It is advisable to leave the metal panels on the pallets as long as possible. If the pallets have to be opened, the durlum metal panel should always be positioned on the long side, it can then be placed carefully against the wall, do not store flat.

Storage must be carried out such that damage is excluded. During storage, durlum ceiling panels have to be protected from all weather influences. Panels to be stored at a constant temperature between  $10^{\circ}$ C and  $40^{\circ}$ C.

The assembly of the ceiling panels must not start until all dust-producing work has been completed [swept clean].

durlum products are certified according to ISO 9001 for development, production, sales and also for service. Nonetheless, it is recommended as a matter of principle to inspect the delivered metal ceilings immediately and to report complaints immediately [as a rule immediately after delivery or within 3 days].

### **GENERAL INFORMATION**

#### STANDARDS AND REGULATIONS

The relevant regulations applicable at the installation site must be determined by the assembly company in question. The ceilings marketed by durlum comply with EN 13964. This standard also regulates the classification of fire protection.

#### APPLICATION

The application of durlum metal ceilings is restricted, unless agreed upon otherwise, to interiors, so that, pursuant to EN 13964, class of use 1, corrosion protection class A, has been defined here as standard.

Should it become necessary to adjust the metal ceiling panels to the building by cutting them, we recommend protecting the cutting edges from corrosion by means of paint in order to maintain the corrosion protection class A.

#### **QUALITY STANDARD**

For material properties, dimensions, tolerances, colour deviations, the TAIM Directives [Technical Association of Industrial Metal Ceiling Manufacturers] applies.

#### MOUNTING SEQUENCE

- 1. Create a ceiling layout plan or use the one from the architect.
- 2. Cross-check the ceiling layout plan against the on-site situation.
- Prepare a bill of materials, including a suitable work plan and retrieval/order of the materials required.
- 4. Determine the required suspension points in accordance with the classes of use of EN 13964. The corresponding suspension distances for the different systems can be taken from the detailed descriptions of the individual ceiling systems.
- 5. Define which generally approved dowel is suitable.

Check the raw ceiling and the walls.

Mark the dowel mounting holes and drill them.

Mount the dowels as specified by the dowel manufacturer and carry out extraction tests using the device recommended by the dowel manufacturer, if necessary.

6. Follow the same procedure when

mounting the perimeter trim, mounting interval approx. 400-625 mm, check transmission of force into wall.

- As a rule, arrangement of the panels should be from the centre of the room to compensate or halve the tolerances of the room/panels. The precise arrangement must always be done on the basis of the ceiling layout plan.
- The metal ceiling panels are often provided with a joint tape [9x3mm], to make for easier tolerance compensation.


Should a joint tape be used, the joints must also be re-aligned from time to time, since the joint tape also has tolerances.


However, owing to the high production precision, it is also possible to connect the panels without a joint tape by using butt joints or provide them with rubber spacer naps.

Always ensure that the joints are aligned.

- Attachments or other loads are to be mounted separately. For logical reasons these parts are integrated during the mounting process.
- After completion and pre-acceptance of the ceiling, the sequence of joints should be re-aligned. Soiled ceiling panels should be cleaned to give a perfect result for assembly.

# FS1.12 KD INSTALLATION MANUAL

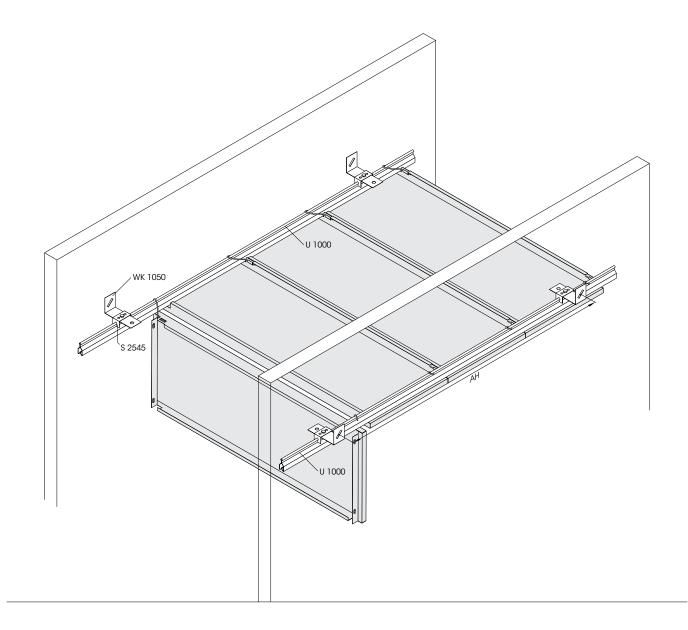

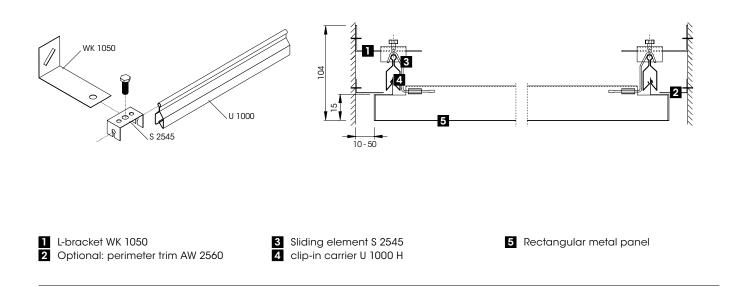

### FS1.12 KD INSTALLATION MANUAL

#### **ABBREVIATIONS**

AH: General distance for mounting:  $\leq 1000 \text{ mm}$ 

This regular distance is less, depending on additional loads, the type of wall and special requirements.

#### PLEASE NOTE

- Use only officially approved dowels.
- The fastening base must be suitable in terms of statics. It must be able to reliably absorb the forces introduced into the construction.
- Maximum tolerance compensation for wall connection with WK 1050: shifting range 10-50 mm.

# ASSEMBLY OF THE LONG SIDE WALL BRACKET

- 1. Level and outline the given ceiling height.
- 2. Outline the upper edge of angle console WK 1050.
- 3. Mark the drill hole.
- 4. Drill a hole for the dowel and set dowel.
- 5. Screw angle console WK 1050 into the dowel.
- 6. Secure the screw connection against loosening.
- 7. Measure the corridor width at several points and centre the shadow gap.
- 8. Use the ordered panel length to check whether the shifting range is sufficient.
- When forming a closed joint, the upper edge of perimeter trim AW 2560 is outlined, the drill holes are marked and drilled and dowels are set.
- 10. The perimeter trim AW 2560 is cut to the required width and screwed to the wall with dowels.
- 11. Insert spline ends \$ 2545 into carrier U 1000.
- Slide spline ends S 2545 on the horizontal shank of the angles consoles WK 1050, align the spline ends according to the desired joint width and fasten them with the hexagon screw Móx12.
- 13. At the joint of the carriers, the longitudinal connector of the carrier U 1002 A is inserted into the carrier.
- 14. The maximum distance between carrier joint and angle console WK 1050 is 200mm.

#### **ASSEMBLY OF THE CEILING PANELS**

- 1. The ceiling panels must always be mounted by two persons.
- 2. Wear clean cotton gloves.
- 3. Remove the protective film from the ceiling panels, if available.

- The ceiling panel is inserted into the carriers U 1000 with both sides using clamping cams and locked into place friction-locked. Both dur brackets are positioned above the U 1000 carrier.
- Check the perpendicularity of the joints and its even width; if necessary, readjust the carrier to the required axis pitch with the spline ends \$ 2545.

# DISASSEMBLY OF THE CEILING PANELS

- 1. The ceiling panels must always be demounted by two persons.
- 2. Wear clean cotton gloves.
- The demounting tool with extraction plate U 1055 TM is inserted vertically from below into the longitudinal joint near the corner point of the ceiling panels and pushed upwards.
- One corner of the panel is released from the carrier U 1000 by pulling down and removed until the tool can be removed.
- 5. This procedure is repeated on the opposite side of the panel and then on the two remaining corners.
- 6. The ceiling panel is unhinged and both dur brackets serve as hinge.
- Remove the plate with both dur brackets from the carrier U 1000 and lower it.
- 8. Put the ceiling panel down and store it protected against damage.

5



AMBIENCE

durlum GmbH | An der Wiese 5 | D-79650 Schopfheim

T +49 (0) 76 22 | 39 05-0

F +49 (0) 76 22 | 39 05-42

E info@durlum.com

I durlum.com